

About Your Cribette

Setting up the Cribette

- Read all instructions before use.
- Check the Cribette for missing or damaged hardware, loose joints or missing parts, or sharp edges before assembly and periodically during use. **DO NOT USE** if any parts are missing, damaged or broken. **Contact Korbex International at 1-800-608-7726 for replacement parts and instructions needed. Never substitute parts.**
- **The Cribette that you were issued cannot be returned to any store.**
- **STOP using the Cribette when the child reaches 35 inches (89cm) in height or is more than 30 pounds (14kg) in weight, or is able to climb out.**
- **DO NOT** modify the Cribette or add any attachments that are not listed in the owner's manual.
- **DO NOT** leave child in Cribette with side(s) lowered. Be sure all sides are raised and locked, center of floor is pushed down and mattress is secured by hook and loop straps whenever child is in the Cribette.
- Strings and cords can cause strangulation. Do not place Cribette near a window where cords from blinds or drapes can strangle a child. Never hang strings on or over the Cribette.

Avoid Suffocation Hazards

- Do not use any other mattress than what is provided by the manufacturer for this Cribette. Follow all safety recommendations for Safe Sleep and Suffocation Prevention as listed in Safe Sleep for Your Baby Brochures.

Using the Bassinet

- Use only the mattress provided by Cribette specific for this playard.
- **FALL HAZARD – DO NOT USE the bassinet when the infant begins to push up on hands and knees or weighs over 15 lbs (6.8) kg, whichever comes first.**
- Never place a child under the bassinet.
- **DO NOT store the bassinet in the playard when child is in the playard.**
- **DO NOT** modify the bassinet with any other attachments.
- The bassinet must be fully assembled and installed as demonstrated by the educator and as listed in instruction manual.
- To help prevent heat build-up inside the playard and to avoid overheating your child, when using the bassinet **DO NOT** use an outdoor canopy.

Care and maintenance

- **To clean the playard-** use only household soap or detergent (mild soap) and warm water.
- **To wash carry bag-** machine wash in cold water on delicate cycle and drip-dry or hand wash. **NO BLEACH.**
- **To wash bassinet-** hand wash with warm water and household soap (mild soap). Drip Dry.
- **If playard is used at the beach/outside – you MUST clean sand/dirt off your playard** including the feet, before packing it in the cover. Sand/dirt in the top rail may damage it.

****REMEMBER TO MAIL IN THE PRODUCT REGISTRATION CARD THAT IS ATTACHED TO YOUR Cribette****

You may go to www.CPSC.GOV for product recalls and to register your Cribette Playard.